



1. Electrical wiring diagram

1.1 Block diagram

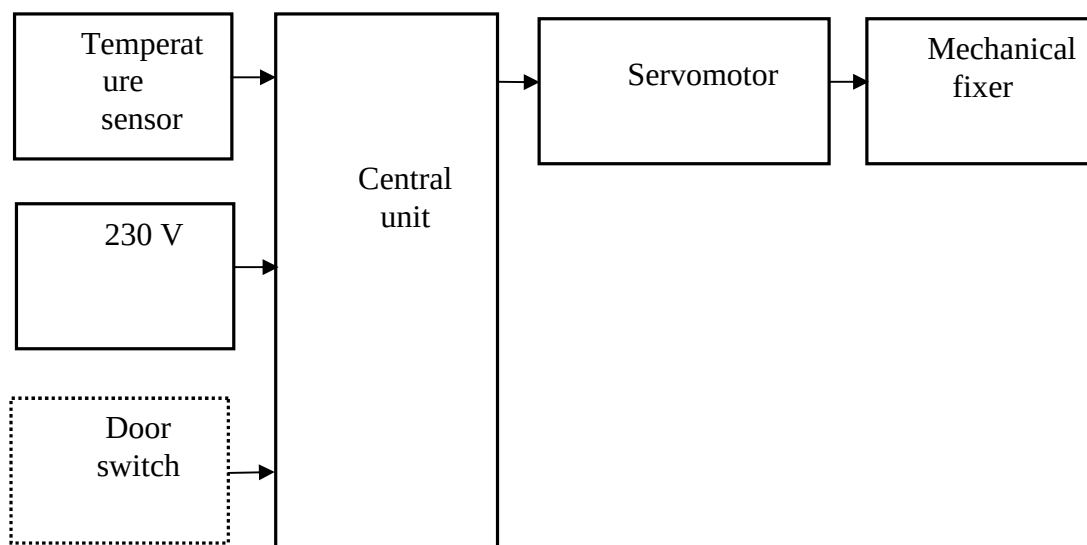

1.2 Electrical wiring diagram for the Romotop Direct control unit board

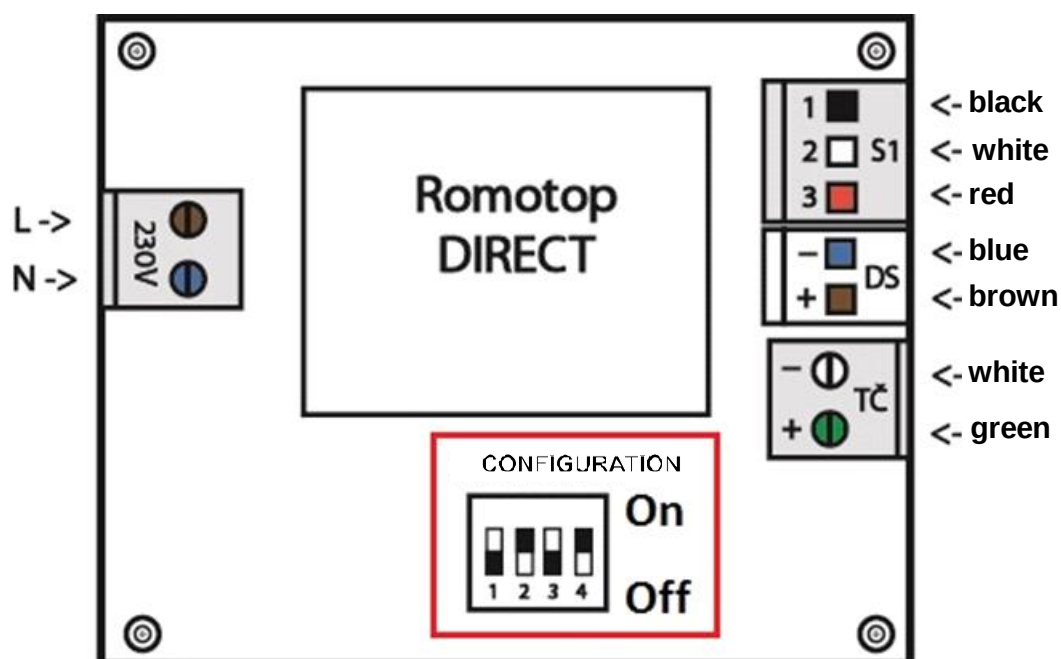

Description of electrical connection:

S1	Servomotor
DS	Door switch
TS	Temperature sensor
CONFIGURATION	Switch for selection of fireplace insert
L	Phase
N	Zero conductor

Note:

The supply cable from the servomotor and the cable from the door switch are equipped with corresponding connectors.